
YK02 Remote Controller User Manual

YK02 Remote controller is suitable for HL series thermostats which have remote control function; It includes: Temperature Setting, Fan Speed Setting, Mode Setting, ON/OFF, etc.

Dimension:

Dimension: 45 × 115 × 25 mm (W × H × D)

Battery Spec: 2 × AAA batteries

Operations:

On/Off: Press "ON/OFF" button to switch the thermostat on/off.

Temperature setting: (Temperature setting range is 18 ~ 30 °C)

Press "TEMP + " The temperature increase 1 °C

Press "TEMP - " The temperature decrease 1 °C

Timer On/Off setting: (Only used for the thermostat which has the timer On/Off function)

Press "TIME" Enable/Disable timer on/off

Press "TIME + " The time of the timer increase by hour

Press "TIME - " The time of the timer decrease by hour

Fan Speed Selections:

Press "SPEED" and display "🌀", set the fan running at high speed

Press "SPEED" and display "🌀", set the fan running at medium speed

Press "SPEED" and display "🌀", set the fan running at low speed

Press "SPEED" and display "AUTO", set the fan running mode to auto mode

Mode Selections:

Press "MODE" and display "☀️", set work mode in heating mode

Press "MODE" again and display "❄️", set work mode in cooling mode

Press "MODE" again and display "🌀", set work mode in ventilation mode

Sleep: Press "SLEEP" button, then thermostat gets into on/off sleep function.

Attention:

Please note the polarity of the battery.

Take the battery out if it is not in use for a long time.

